#### **Product Data Sheet** 00813-0100-2460, Rev CA May 2020

# Rosemount<sup>™</sup> 2460 System Hub

# for tank gauging systems



## Transfers tank gauging data to Rosemount TankMaster<sup>™</sup>, Host and DCS systems

- Ensure fast data update rate
- Serves up to 64 tanks
- Benefit from scalable options for all system sizes
- Get real-time inventory calculations with API standard net volumes
- Get flexible and configurable multiple port connectivity
- Achieve instrument and system redundancy
- Enable other vendor emulation by bringing in data from gauges such as Enraf<sup>®</sup>, Varec<sup>®</sup>, and Sakura



ROSEMOUNT

# Efficient update of vital online tank data

The Rosemount 2460 System Hub is a data concentrator that continuously polls and stores data from field devices such as radar level gauges, pressure and temperature devices. Measured and calculated data from one or more tanks is communicated via the Rosemount 2410 Tank Hub to the system hub buffer memory. Whenever a request is received, the system hub can immediately send data from a group of tanks to a TankMaster PC or a host.

The system hub also supports connection of other tank gauging instruments such as TankRadar<sup>™</sup> Pro and TankRadar Rex gauges. In addition, it can be used to connect devices from other vendors, such as Honeywell<sup>®</sup> Enraf, Whessoe, etc.

#### Figure 1: System Overview



- A. TankMaster PC
- B. Host System
- C. Modem
- D. Modbus RTU
- E. Rosemount 2460 System Hub
- F. Modbus<sup>®</sup> RTU/TCP
- G. Fieldbus
- H. Rosemount 2410 Tank Hub
- I. Tankbus
- J. Rosemount 2240S Multi-input Temperature Transmitter
- K. Rosemount 5900S Radar Level Gauge
- L. Rosemount 2230 Graphical Field Display
- M. Rosemount 3051S Pressure Transmitter

### Contents

Efficient update of vital online tank data	2
Ordering information	7
Specifications	13
Product certifications	20
Dimensional drawings	21

# Configurable multiple port connectivity

The Rosemount 2460 has eight slots for communication interface boards. These boards can be individually configured for communication with hosts or field devices. The Rosemount 2460 supports a number of host communication interface standards such as Ethernet, TRL2, RS485, and RS232. For field communication TRL2 and RS485 are supported, as well as other standards such as Enraf BPM and Digital Current Loop (Whessoe).

# Modbus TCP communication to host

One of the system hub's three Ethernet ports is used for Modbus TCP connection to host systems. By simply connecting the system hub to the existing LAN network, communication over Ethernet is established:

- Easy access, no special converters required
- Fast communication
- No need for dedicated cabling
- Can be connected to TankMaster or other hosts

## **User-defined Modbus mapping**

The Rosemount 2460 can easily be integrated into existing hosts as it can be configured to match the existing value mapping of the current system. It provides flexibility when replacing legacy devices as it can be set up to match the old device without configuring the host system.

#### Figure 2: User-Defined Modbus Mapping



- A. TankMaster PC<sup>(1)</sup>
- B. Rosemount 2460 System Hub
- C. Existing legacy HMI<sup>(2)</sup>
- D. Existing DCS<sup>(2)</sup>

<sup>(1)</sup> Standard connection to Rosemount 2460.

<sup>(2)</sup> User-defined Modbus mapping set-up to match the configuration of the legacy data collector.

# Improved system reliability with redundancy

The system hub can provide redundancy for critical operations by using two identical devices.

The primary system hub is in active mode and the other one is in passive mode. If the primary unit stops working properly the secondary unit is activated and a failure message is sent to TankMaster (or a DCS system).

Redundancy can be utilized for some or all equipment in the system from the control room to the field devices.

Redundancy is supported on field level as well by using two field devices connected to the same tank for hot redundancy of field values. It can be a Rosemount 5900 2-in-1, two separate Rosemount 5900 devices, or two separate devices of different types.

Field port redundancy is supported where two field ports can be connected in a ring network where one acts as a hot backup. All field ports are available for redundancy. It is also possible to use redundancy individually on ports 1-2, ports 3-4, or ports 5-6.

#### Figure 3: Redundancy



- A. TankMaster client PCs
- B. Switch
- C. TankMaster servers
- D. Rosemount 2460 System Hubs

# Seamless integration of gauges from other vendors

Replace your old tank management system with Rosemount TankMaster by connecting the system hub to the existing field devices, such as Enraf, Whessoe, or Varec.

Rosemount TankMaster can seamlessly replace an existing inventory management system, still being able to communicate with the field devices in use. This often enables a better update rate than before.

Emulation also enables the step-by-step modernization of a tank farm by replacing old field devices with Rosemount 5900 level gauges, temperature devices, and one or several tank hubs.

Any Modbus field device that communicates via RS485 Modbus RTU can be integrated into Rosemount 2460. Up to three device types can be defined.

#### Figure 4: Integration of Gauges From Other Vendors



- A. TankMaster PC
- B. Rosemount 2410 Tank Hub
- C. Rosemount 2460 System Hub
- D. Rosemount 5900S Level Gauge
- E. Gauges in an existing system from another vendor

# **Inventory calculation**

Real-time inventory calculations include gross and net volumes as well as mass calculations, according to current API tables (6, 54, 24, 60, A-D) and ASTM D4311.

Tank Capacity Tables (5000 strapping points per tank/table) are supported for cylindrical and spherical tanks.

Net Standard Volume can be calculated at a user-specified reference temperature for specific tables.

#### Figure 5: Inventory Calculation



- A. Level
- B. Tank Capacity Table
- C. Total Observed Volume
- D. Gross Observed Volume
- E. Volume Correction Factor, CTPL (VCF)
- F. Gross Standard Volume
- G. Sediment & Water
- H. Net Standard Volume
- I. Free Water Volume
- J. Volume
- K. Temperature
- L. T<sub>Reference</sub>

# Ordering information

#### Rosemount 2460 System Hub



The Rosemount 2460 System Hub transfers real time tank gauging data from field devices to the Rosemount TankMaster Inventory Management Software and/or a Host/DCS system. The system hub has eight configurable ports for host or field device communication. It supports system redundancy and emulation of other vendor devices.

VIEW PRODUCT >

#### Table 1: Rosemount 2460 System Hub Ordering Information

Model	Product description			
2460	System Hub			
Capacity <sup>(1)</sup>	(2)			
1	1-16 tanks			
4	1-48 tanks			
6	1-64 tanks			
Firmware				
S	Standard			
1	Inventory calculation, 1-16 tanks			
4	Inventory calculation, 1-48 tanks			
6	Inventory calculation, 1-64 tanks			
Redundanc	Redundancy/Remote access (Ethernet)			
0	None			
R <sup>(3)(4)</sup>	Redundancy			
Modbus m	apping			
S	Standard			
G <sup>(5)</sup>	User-defined Modbus mapping (Enables customized mapping for host communication.)			
Port 1, field	d communication (serial port) <sup>(6)</sup>			
R	TRL2 Modbus			
E	Enraf Bi-phase Mark GPU			
G	GPE (Digital Current Loop)			
Р	GPE (RS485)			
Н	Whessoe WM 550/660 (Digital Current Loop)			
Υ	Whessoe WM 660 (RS485)			
L(7)(8)	L&J Tankway			
V <sup>(7)(8)</sup>	Varec Mark/Space			

## Table 1: Rosemount 2460 System Hub Ordering Information (continued)

U <sup>(9)</sup>	Sakura V1, MDP, BBB					
Т	Tokyo Keiso, TIC					
4	RS485 Modbus					
Port 2, field	l communication (serial port) <sup>(6)</sup>					
0 <sup>(10)</sup>	None					
R	TRL2 Modbus					
E	Enraf Bi-phase Mark GPU					
G	GPE (Digital Current Loop)					
Р	GPE (RS485)					
Н	Whessoe WM 550/660 (Digital Current Loop)					
Υ	Whessoe WM 660 (RS485)					
L <sup>(7)(8)</sup>	L&J Tankway					
V <sup>(7)(8)</sup>	Varec Mark/Space					
U <sup>(9)</sup>	Sakura V1, MDP, BBB					
Т	Tokyo Keiso, TIC					
4	RS485 Modbus					
Port 3, field	3, field communication (serial port) <sup>(6)</sup>					
0 <sup>(10)</sup>	None					
R	TRL2 Modbus					
E	Enraf Bi-phase Mark GPU					
G	GPE (Digital Current Loop)					
Р	GPE (RS485)					
Н	Whessoe WM 550/660 (Digital Current Loop)					
Υ	Whessoe WM 660 (RS485)					
L <sup>(7)(8)</sup>	L&J Tankway					
V <sup>(7)(8)</sup>	Varec Mark/Space					
U <sup>(9)</sup>	Sakura V1, MDP, BBB					
Т	Tokyo Keiso, TIC					
4	RS485 Modbus					
Port 4, field	communication (serial port) <sup>(6)</sup>					
0 <sup>(10)</sup>	None					
R	TRL2 Modbus					
E	Enraf Bi-phase Mark GPU					
G	GPE (Digital Current Loop)					
Р	GPE (RS485)					
Н	Whessoe WM 550/660 (Digital Current Loop)					

Y	Whessoe WM 660 (RS485)
L <sup>(7)(8)</sup>	L&J Tankway
V <sup>(7)(8)</sup>	Varec Mark/Space
U <sup>(9)</sup>	Sakura V1, MDP, BBB
Т	Tokyo Keiso, TIC
4	RS485 Modbus
Port 5, field	d or host communication (serial port) <sup>(6)</sup>
00 <sup>(10)</sup>	None
FR	TRL2 Modbus, field communication
FE	Enraf Bi-phase Mark GPU, field communication
FG	GPE (Digital Current Loop), field communication
FP	GPE (RS485), field communication
FH	Whessoe WM 550/660 (Digital Current Loop), field communication
FY	Whessoe WM 660 (RS485), field communication
FL <sup>(7)(8)</sup>	L&J Tankway, field communication
FV <sup>(7)(8)</sup>	Varec Mark/Space, field communication
FU <sup>(9)</sup>	Sakura V1, MDP, BBB
FT	Tokyo Keiso, TIC
F4	RS485 Modbus (Fieldbus)
H8 <sup>(11)</sup>	Enraf CIU 858 emulation (RS485)
HR	TRL2 Modbus, host communication
H4	RS485 Modbus, host communication
Port 6, field	d or host communication (serial port) <sup>(6)</sup>
00 <sup>(10)</sup>	None
FR	TRL2 Modbus, field communication
FE	Enraf Bi-phase Mark GPU, field communication
FG	GPE (Digital Current Loop), field communication
FP	GPE (RS485), field communication
FH	Whessoe WM 550/660 (Digital Current Loop), field communication
FY	Whessoe WM 660 (RS485), field communication
FL <sup>(7)(8)</sup>	L&J Tankway, field communication
FV <sup>(7)(8)</sup>	Varec Mark/Space, field communication
FU <sup>(9)</sup>	Sakura V1, MDP, BBB
FT	Tokyo Keiso, TIC
F4	RS485 Modbus, field communication
H8 <sup>(11)</sup>	Enraf CIU 858 emulation (RS485), host communication

## Table 1: Rosemount 2460 System Hub Ordering Information (continued)

HR	TRL2 Modbus, host communication					
H4	RS485 Modbus, host communication					
Port 7, hos	ost communication (serial port)					
00 <sup>(10)</sup>	None					
TR	TRL2 Modbus communication to TankMaster					
T2	RS232 Modbus communication to TankMaster					
T4	RS485 Modbus communication to TankMaster					
HE <sup>(11)</sup>	Enraf CIU 858 emulation (RS232)					
H8 <sup>(11)</sup>	Enraf CIU 858 emulation (RS485)					
HR	TRL2 Modbus communication to host/DCS					
H2	RS232 Modbus communication to host/DCS					
H4	RS485 Modbus communication to host/DCS					
Port 8, hos	t communication (serial port)					
TR	TRL2 Modbus communication to TankMaster					
Т2	RS232 Modbus communication to TankMaster					
T4	RS485 Modbus communication to TankMaster					
OPC host c	ommunication (Ethernet)					
00	None					
Modbus TC	P host communication (Ethernet)					
00	None					
МТ	TankMaster TCP connection. Two TankMaster clients can connect.					
M1 <sup>(12)(5)</sup>	1 Modbus TCP client					
M5 <sup>(12)(5)</sup>	1-5 Modbus TCP clients					
Power sup	ply					
Р	100-250 VAC 50/60 Hz, 24-48 VDC					
Custody tra	ansfer type approval <sup>(13)</sup>					
R	OIML R85 edition 2008					
А	CMI (Czech Republic)					
С	PTB Eich (Germany)					
1	Ministero (Italy)					
L	LNE (France)					
N	NMi (The Netherlands)					
0	ONML (Algeria)					
Т	ANM (Tunisia)					
0	None					

Housing						
A	Aluminum (polyurethane-covered), IP 65					
Cable/cond	luit connections					
G	Metal cable glands (M20 x1.5 and M25 x1.5)Includes: 2 pcs M25 plugs7 pcs M20 plugs7 pcs M20 plugs2 pcs M25 glands9 pcs M20 glands					
1	NPT adapters (½ -14 NPT and ¾ -14 NPT) Includes: 2 pcs M25 plugs 7 pcs M20 plugs 2 pcs ¾-14 NPT adapters 9 pcs ½-14 NPT adapters					
2	Metal plugs (M20 x 1.5 and M25 x1.5) Includes:   2 pcs M25 plugs   7 pcs M20 plugs					
Extra						
0	None					
Options (include with selected model number)						
Tag plate						
ST	Engraved SST tag plate					
Conformance certificate						
Q1	Printed copy of certificate of conformance					
Extended v	varranty <sup>(14)</sup>					
WR3	3-year limited warranty					
WR5	5-year limited warranty					
Typical mo	del number: 2460 1 S O S R R R R FR FR TR TR 00 00 P R A 1 0 WR3					

#### Table 1: Rosemount 2460 System Hub Ordering Information (continued)

(1) Maximum number of tanks depends on selected field ports configuration.

(2) Depending on device type and application, the number of devices per tank, or number of tanks per device, may differ.

(3) Dual Rosemount 2460 System Hub redundancy requires two system hubs with identical model codes. For redundant systems with emulation, consult factory for technical guidance.

(4) This option is required to be able to use field port redundancy and/or field device redundancy. Field port redundancy is only possible for TRL/2 and RS485 ports, where the same interface must be used on each pair. The capacity of the Rosemount 2460 is reduced when using field port redundancy.

(5) When using Modbus TCP in combination with user-defined Modbus mapping, the same Modbus mapping will be used for all clients. In this case, TankMaster cannot be used.

(6) See Table 2 for maximum number of devices connected to each field port.

(7) Not supported for redundant system hubs (Redundancy option code R).

(8) External power supply is required for powering the bus.

(9) Only one protocol can be used per port.

(10) Empty ports will not be enabled for use. To activate an empty port after delivery, a port upgrade must be ordered.

(11) Emulation of Enraf CIU 858 for connection to existing host system or service/configuration tool.

(12) A redundant TankMaster system requires two clients when TankMaster is connected via Modbus TCP.

(13) Requires Rosemount 5900S Radar Level Gauge and Rosemount 2410 Tank Hub with corresponding Custody transfer type approval.

(14) Standard warranty is 18 months from delivery.

# Specifications

# **Communication/configuration specifications**

## Number of tanks

Each Rosemount 2460 can be configured for up to 64 tanks. The actual number of tanks depends on the electrical interface and field port configuration. For more information, see Table 2.

Note that each Rosemount 5900S Radar Level Gauge with 2-in-1 functionality corresponds to two tanks.

### Number of devices per field port

Table 2 lists the maximum number of devices that can be connected to each Rosemount 2460 field port. Examples of devices are Rosemount 2410, Rosemount TankRadar Pro, and legacy devices, such as Rosemount TankRadar Rex and Rosemount TankRadar TRL2.

#### Table 2: Number of Devices

Interface	Maximum number of devices connected to each field port
RS485 <sup>(1)</sup>	16
TRL2 <sup>(2)</sup>	8
Enraf BPM	10
Digital Current Loop 0-20 mA (DCL) <sup>(3)</sup>	10 <sup>(4)</sup>
L&J	10 <sup>(5)</sup>
Varec	10 <sup>(5)</sup>

(1) Devices such as E+H NRF590 Tank Side Monitor (TSM), devices using TSM Modbus mapping, Whessoe, GPE, SI-6290/7000, Wärtsilä 1146, and user-defined Modbus devices are supported.

(2) Devices such as Rosemount 2410 Tank Hub, Rosemount TankRadar Rex, Rosemount TankRadar Pro, TRL2 gauges, and DAU are supported.

(3) Devices such as Whessoe and GPE are supported.

(4) Up to 32 devices are supported when using external power.

(5) In certain situations, more than 10 devices may work. Contact Emerson Automation Solutions/Tank Gauging Service Department for advice.

## Number of ports

Interface	Number of ports
Modem <sup>(1)</sup>	8
Ethernet <sup>(2)</sup>	3
USB <sup>(2)</sup>	1
SD <sup>(2)</sup>	1

(1) For more information, see Table 4 and Table 3.

(2) For more information, see Table 6.

Modem ports can be configured for either field or host communication according to the model code. For more information, see Table 5.

### Hosts

See Table 4 and Table 5.

## Rosemount 2160/2165 emulation

Host protocol, supporting the Rosemount 2160/2165 Field Communication Unit input register mapping. Enables the replacement of Rosemount 2160/2165 without re-programming the host. The maximum number of tanks is reduced to 32 when using 2160 emulation.

## **Digital communication protocols**

#### Table 3: Serial Field Communication Ports (1-6)

Supported devices	Protocol	Electrical interface	Baud rate	Port	
Rosemount 2410,TankRadar Rex gauges (with SDAU), IDAU, TankRadar Pro, and TankRadar TRL2 gauges	Modbus RTU	TRL2	4800		
Rosemount 2410		RS485 (2-wire)	150-38400		
Enraf 811, 813, 854, 873, 877, 894, 970, 971, 973, and TOI-B <sup>(1)</sup>	GPU	Enraf Bi-phase Mark	1200/2400	-	
GPE 31422, 31423	CDE	20 mA Digital Current Loop	150-2400		
	GPE	RS485	150-38400		
Whessoe 1315, 1143	WM 550	20 mA Digital Current Loop	150-2400		
		20 mA Digital Current Loop	150-2400		
		RS485	150-38400		
L&J 1500 XL, MCG 2000, L&J MCG 1600	L&J Tankway	L&J Tankway	300-4800	1-6	
Varec 1800, 1900	Varec Mark/Space	Varec Mark/Space Varec Mark/Space 70			
E+H NRF590 Tank Side Monitor					
User-defined Modbus devices <sup>(2)</sup>			150-38400		
LTD (Level, Temperature, Density) SI 6290/7000	Modbus	RS485			
LTD (Level, Temperature, Density) Whessoe/ Wärtsilä 1146					
Tokyo Keiso	Tokyo Keiso	Tokyo Keiso	2400	]	
Sakura	Sakura V1 Sakura MDP	Sakura	9600		

(1) Enraf 990 uses TOI-B for measurement data.

(2) Fully configurable up to three device types.

#### Table 4: Host Communication Ports (5-8)

Supported devices	Protocol	Electrical interface	Baud rate	Port
TankMaster	Modbus RTU	TRL2	4800	5-8
		RS485 (2-wire)	150-38400	5-8 <sup>(1)</sup>
		RS485 4-wire)		7-8 <sup>(1)</sup>
		RS232		7-8
	Modbus TCP	Ethernet	N/A	Eth1
Other hosts (DCS, SCADA etc.)		TRL2	4800	5-7
	Modbus RTU	RS485 (2-wire)		5-7 <sup>(1)</sup>
		RS485 (4-wire)	150-38400	7 <sup>(1)</sup>
		RS232		7
Enraf CIU 858 emulation <sup>(2)</sup>		RS485 (2-wire)		5-7 <sup>(1)</sup>
	GPU	RS485 (4-wire)	150-38400	7 <sup>(1)</sup>
		RS232		7

(1) Configurable termination by hardware switch.

(2) One Rosemount 2460 can replace multiple Enraf CIU 858 devices by replying to more than one separate addresses.

#### **Table 5: Port Configuration Options**

Ports	1	2	3	4	5	6	7	8
Alternative 6+2 (standard)	Field Port	Host Port	Host Port					
Alternative 5+3	Field Port	Host Port	Host Port	Host Port				
Alternative 4+4	Field Port	Field Port	Field Port	Field Port	Host Port	Host Port	Host Port	Host Port

#### **Table 6: Additional Interfaces**

Electrical interface	Description
Ethernet 1 (ETH 1) <sup>(1)(2)</sup>	Modbus TCP connection to host system
Ethernet 2 (ETH 2) <sup>(2)</sup>	Connected to redundant system hub
Ethernet 3 (ETH 3) <sup>(2)</sup>	Used for accessing the web interface via a web browser for advanced configuration and service
USB 2.0 <sup>(3)</sup>	USB memory stick for logging diagnostic data
SD <sup>(3)</sup>	SD card for logging diagnostic data

(1) When connecting the system hub to the local LAN network, make sure the connection is secure to prevent unauthorized access.

(2) CAT 5 or 6 cable is recommended.(3) FAT32 file system.



#### Figure 6: Typical Configuration of a Rosemount 2460 System Hub

- A. TankMaster
- B. USB RS232
- C. Modem
- D. Ethernet (Modbus TCP), RS232, RS485
- E. TRL2, RS485
- F. DCS/Other hosts (TRL2, RS485, RS232)
- G. Rosemount 2460 System Hub
- H. Modbus RTU/TCP
- I. Other hosts
- J. Field devices
- K. Tankbus
- L. Rosemount 2410 Tank Hub
- M. Primary bus: TRL2, RS485
- N. TRL2, RS485, other vendors
- O. Secondary bus: Enraf, Whessoe and others, HART 4-20 mA analog output/input

## Figure 7: Typical Redundant Configuration



- A. TankMaster
- B. Modem

F

- C. Rosemount 2460 System Hub, primary
- D. Rosemount 2460 System Hub, secondary
- E. Redundancy control signal
- F. Field devices
- G. Tankbus
- H. Rosemount 2410 Tank Hub

# **Electrical specifications**

## **Power supply**

24-48 VDC (-15%, +10%) 100-250 VAC (-15%, +10%), 50/60 Hz (±2%)

## **Power consumption**

Maximum 20 W

## **Cable entries**

Nine M20 x 1.5 (female thread) Two M25 x 1.5 (female thread)

## **Electrical interface**

See Table 4, Table 3 and Table 6.

### Cable size

Power: 0.75 to 2.1 mm<sup>2</sup> (18-14 AWG) Bus: 0.5 to 2.5 mm<sup>2</sup> (20-14 AWG) depending on communication interface

### **Built-in mains fuses**

T1.6 A

## **Backup battery**

3V CR 1632 lithium

# **Mechanical specifications**

## **Housing material**

Polyurethane-covered die-cast aluminum

### Installation

Wall mounted by four screws. For more information, see Dimensional drawings.

### Weight

7 kg (15 lbs)

# **Environmental specifications**

## **Temperature limits**

**Ambient temperature** -40 to 70 °C (-40 to 158 °F)

**Storage temperature** -40 to 80 °C (-40 to 176 °F)

Humidity limits 0-100% relative humidity

Ingress protection

# **Additional specifications**

Metrology sealing possibility Yes

## Write protection Yes, via software configuration and/or hardware switch.

Emerson.com/Rosemount

# Product certifications

Rev 3.1

## **European directive information**

The most recent revision of the EU Declaration of Conformity can be found at Emerson.com/Rosemount.

# **Ordinary location certification**

As standard, the Rosemount 2460 System Hub has been examined and tested to determine that the design meets the basic electrical, mechanical, and fire protection requirements by a nationally recognized test laboratory (NRTL) as accredited by the Federal Occupational Safety and Health Administration (OSHA).

Certificate	2735155
Standards	CAN/CSA-C22.2 No. 61010-1-12; UL Std. No. 61010-1 (3rd Edition);
Markings	Rated 24-48 V dc, 100-250 V ac, 20 W, 50/60 Hz; Ambient rated -40 to +70 $^\circ\mathrm{C}$

# Electromagnetic compatibility compliance

#### FCC

This device complies with Part 15 of the FCC Rules.

Standards FCC 47 CFR Part 15B, 15.107 Conducted emission class A, 15.109 Radiated Emission class A

# **Custody transfer certifications**

#### OIML custody transfer

**Certificate** R85-2008-SE-11.01

# **Dimensional drawings**

Figure 8: Rosemount 2460 System Hub





Dimensions are in millimeters (inches).

## Figure 9: Rosemount 2460 System Hub



A. 474 (18.7) with lid maximum open Dimensions are in millimeters (inches).

#### Global Headquarters and Europe Regional Office Tank Gauging

Emerson Automation Solutions Box 150 (Visiting address: Layoutvägen 1) SE-435 23 Mölnlycke Sweden +46 31 337 00 00 +46 31 25 30 22

Sales.RTG@Emerson.com

#### Latin America Regional Office

Emerson Automation Solutions 1300 Concord Terrace, Suite 400 Sunrise, FL 33323, USA + 1 954 846 5030 + 1 954 846 5121 RMTLAContactUS@Emerson.com

#### Middle East and Africa Regional Office

Emerson Automation Solutions Emerson FZE P.O. Box 17033 Jebel Ali Free Zone - South 2 Dubai, United Arab Emirates III +971 4 8118100 C +971 4 8865465 C RTGMEA.Sales@Emerson.com

#### North America Regional Office Tank Gauging

#### Asia Pacific Regional Office

Emerson Automation Solutions 1 Pandan Crescent Singapore 128461 1 +65 6777 8211 2 +65 6777 0947 Specialist-OneLevel.RMT-AP@Emerson.com

in Linkedin.com/company/Emerson-Automation-Solutions

Twitter.com/Rosemount\_News

Facebook.com/Rosemount

🔛 Youtube.com/user/RosemountMeasurement

©2020 Emerson. All rights reserved.

Emerson Terms and Conditions of Sale are available upon request. The Emerson logo is a trademark and service mark of Emerson Electric Co. Rosemount is a mark of one of the Emerson family of companies. All other marks are the property of their respective owners.



# ROSEMOUNT